



RC3100

Auto Acquisition Antenna Controller for Transportable VSAT



FEATURES

- **Built In DVB Receiver**
Auto Acquisition independent of satellite modem
- **Easy Operation**
One button deploy, one button stow
- **PC Not Required for Setup or Operation**
2x16 LCD and keypad with 8 keys. Manual antenna control and troubleshooting from front panel.
- **True Elevation Angle Sensing Inclinometer**
0.1 degree accuracy
- **Automatic Pol Pointing**
ACU determines platform tilt.
- **Optional Low Cost Compass**
Mounts on the upper edge of the antenna. Reduces auto acquisition time. Without compass the ACU scans the antenna over the full range of azimuth travel looking for DVB lock.

SPECIFICATIONS

PHYSICAL

Size: 2 U Rack Mount 17.0" (deep)

Weight: 15.0 lbs.

Input Power: 115/230 VAC: switchable, 50/60 Hz., 50 W idle, 220W when moving
CE compliant

Temperature: 0° – 50° C

I/O

Drive: AZ/EL/Pol Motors 12-24 VDC
6 Amps max

Sensor Input: Az: Potentiometer and/or Encoder
El: True Sensing Inclinometer
Pol: Potentiometer and/or Encoder


DVB: DVB Standard: DVB-S
Input Frequency Range: 950-2150 MHz
FEC: 1/2, 2/3, 3/4, 5/6, 6/7, 7/8
Sample Rate: 1-45 M_samples per sec

Limits: Over travel and stow limits for each axis

Research Concepts, Inc.

5420 Martindale Road
Shawnee, Kansas 66218-9680 USA
Phone: (913) 422-0210
Fax: (913) 422-0211
E-mail: sales@researchconcepts.com

www.researchconcepts.com

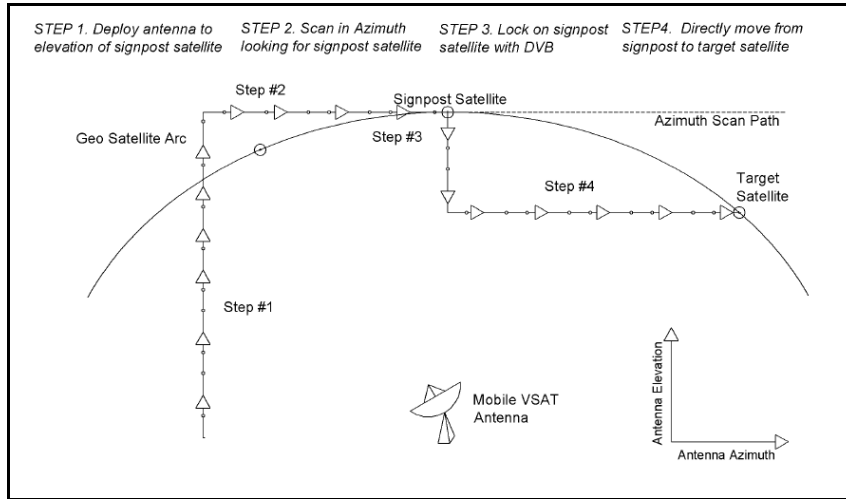

Auto Acquisition Sequence

On power up, the user will be prompted to either auto acquire or stow the antenna.

When the user selects Acquire, the ACU (antenna control unit) will deploy the antenna and perform a series of moves to determine the tilt of the platform.

After the antenna is deployed, the ACU will position the antenna at the elevation angle required to align the antenna with the SignPost satellite, see Step #1 above. The signpost satellite is specified via the ACU's SignPost Data Entry screen, shown below.

The ACU will then perform a scan in azimuth to find the SignPost satellite, see Step #2 above.

While the antenna azimuth scan is in progress, the ACU will monitor the DVB receiver for a Lock indication. When the DVB Lock condition is detected, the antenna azimuth scan will terminate and the ACU will peak up the antenna in azimuth and elevation, see Step #3 above. The DVB parameters are specified via the ACU's DVB data entry screen (shown below).

After the ACU peaks up on the SignPost satellite, the azimuth and elevation offsets between the SignPost and Target satellites are determined. The antenna can then be directly positioned on the Target satellite. An optional peak up based on the ACU's broadband power detector can be performed.

Power On Screen

▲ ACQUIRE: 99W
▼ STOW AUTO

Hit the Up key for Auto Acquire, hit the down key for Stow

SignPost Satellite Data Entry Screen

L:119W PL:H
OFF:-0.0 SPOST

Longitude: 180E – 180W

Polarization: H or V

Pol Offset: -90.0 to +90.0, *this field specifies the polarization offset from the theoretical polarization value*

Target Satellite Data Entry Screen

FR:12010 FEC:7/8
SYM:11255 DVB

Longitude: 180E – 180W

Peak up: Y or N, *the ACU can optionally peak on the Target satellite using the ACU's built-in broadband power detector*

Polarization: H or V

Pol Offset: -90.0 to +90.0, *this field specifies the polarization offset from the theoretical polarization value*

DVB Data Entry Screen

FR:12010 FEC:7/8
SYM:11255 DVB

DVB parameters associated with the SignPost Satellite ...

RF Receive Frequency: 950 – 2150 MHz

FEC (Forward Error Correction) Code: 1/2, 2/3, 3/4, 5/6, 6/7, 7/8

Symbol Rate: 1 to 45 Mega Samples per second